


## Installation Notes

First, install **REGUPOL perimeter isolation strips** around all walls and penetrations. Then loose lay the **REGUPOL sonus core** over the subfloor from wall to wall. Next, install non-woven polyester fabric (garden fabric or weed control) on top of the **sonus core** and up the walls. Overlap the fabric by 6" and tape the seems. Tape the fabric to the walls. Afterwards, pour the gypsum topping on top of the fabric at a minimum of 1-1/4" thick and 2500 PSI. Install the finish floor and cut the **perimeter isolation strips** flush.

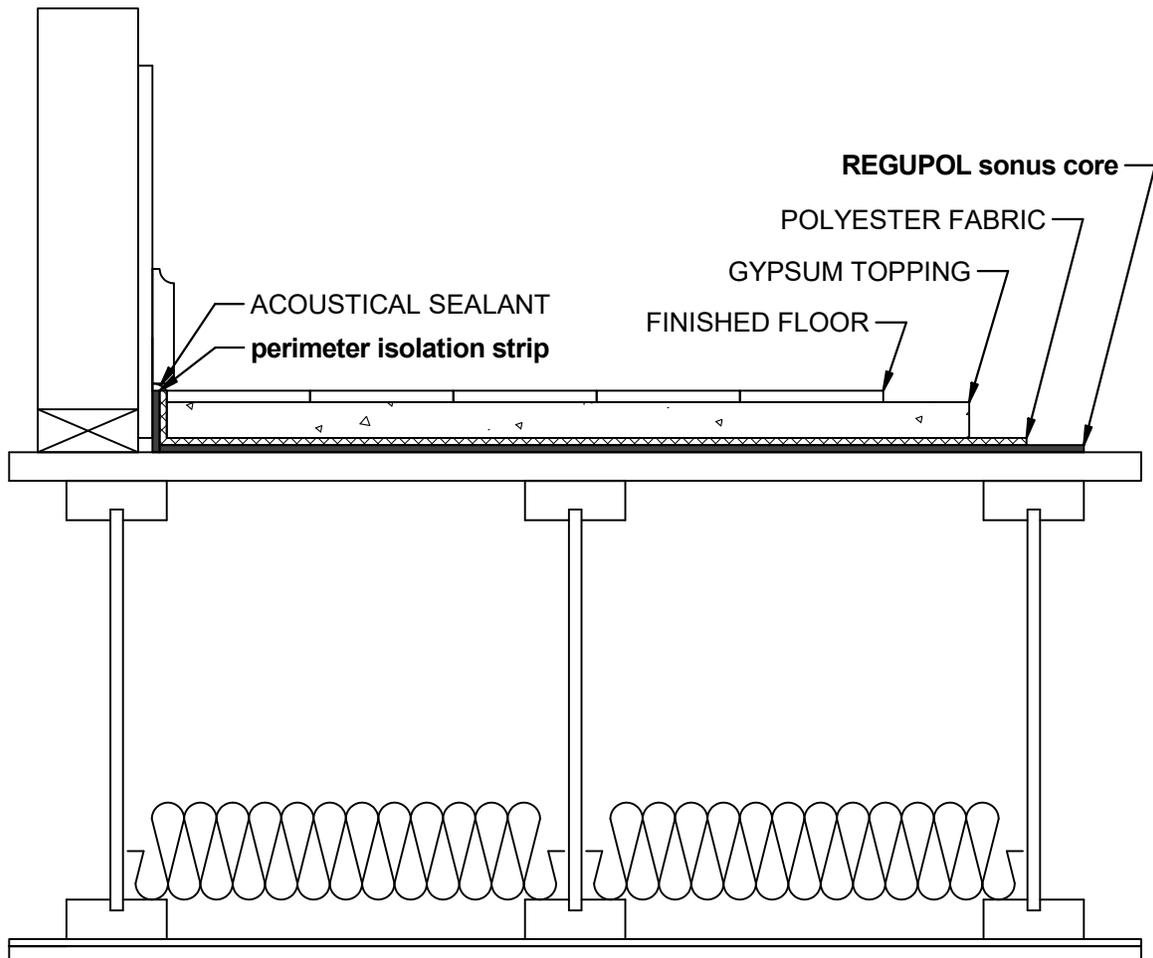

### Contact

**REGUPOL America LLC**  
 11 Ritter Way  
 Lebanon, Pennsylvania 17042  
 UNITED STATES OF AMERICA  
[www.regupol.com](http://www.regupol.com)

### Notes

Adjacent trades are only shown schematically and in parts. The applicability and other conditions or constraints need to be checked by the customer or user on their own responsibility. The technical data sheets, installation instructions and local conditions need to be considered.

### Project:

Project no.:

Detail: sonus core gypsum installation

Drawn by: DLG

Date: 4.14.2021

Scale: N/A

DWG no.: 1